


# VanMoof rear carrier - Assembly manual

## Parts and tools

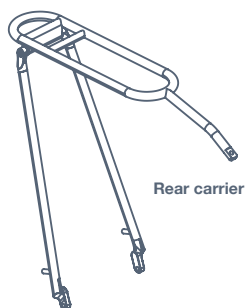

Allen key #3  
(Included in the toolbox that comes with your S3/X3 or S4/X4)



M5 bolt x 20mm




M5 bolt x 16mm (2x)




Washers (3x)

1. First, place the carrier on top of the rear fender and align the stays with the bike frame.

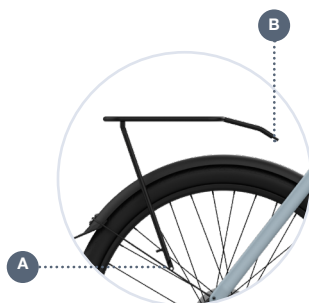

2. Tighten the two 16mm bolts, including washers, in the lower ends (A) using Allen key #3. Make sure the carrier stays are on the inside of the rear drop-outs.

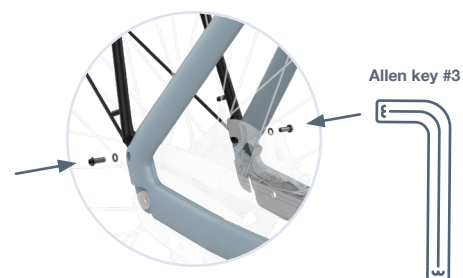

3. Tighten the 20mm bolt to the tube located underneath the rear light (B), using Allen key #3. Make sure to place the washer between the frame and the carrier.



4. Finally, tighten the carrier stay bolts, using Allen key #3. Now the rear carrier is ready to be used!

